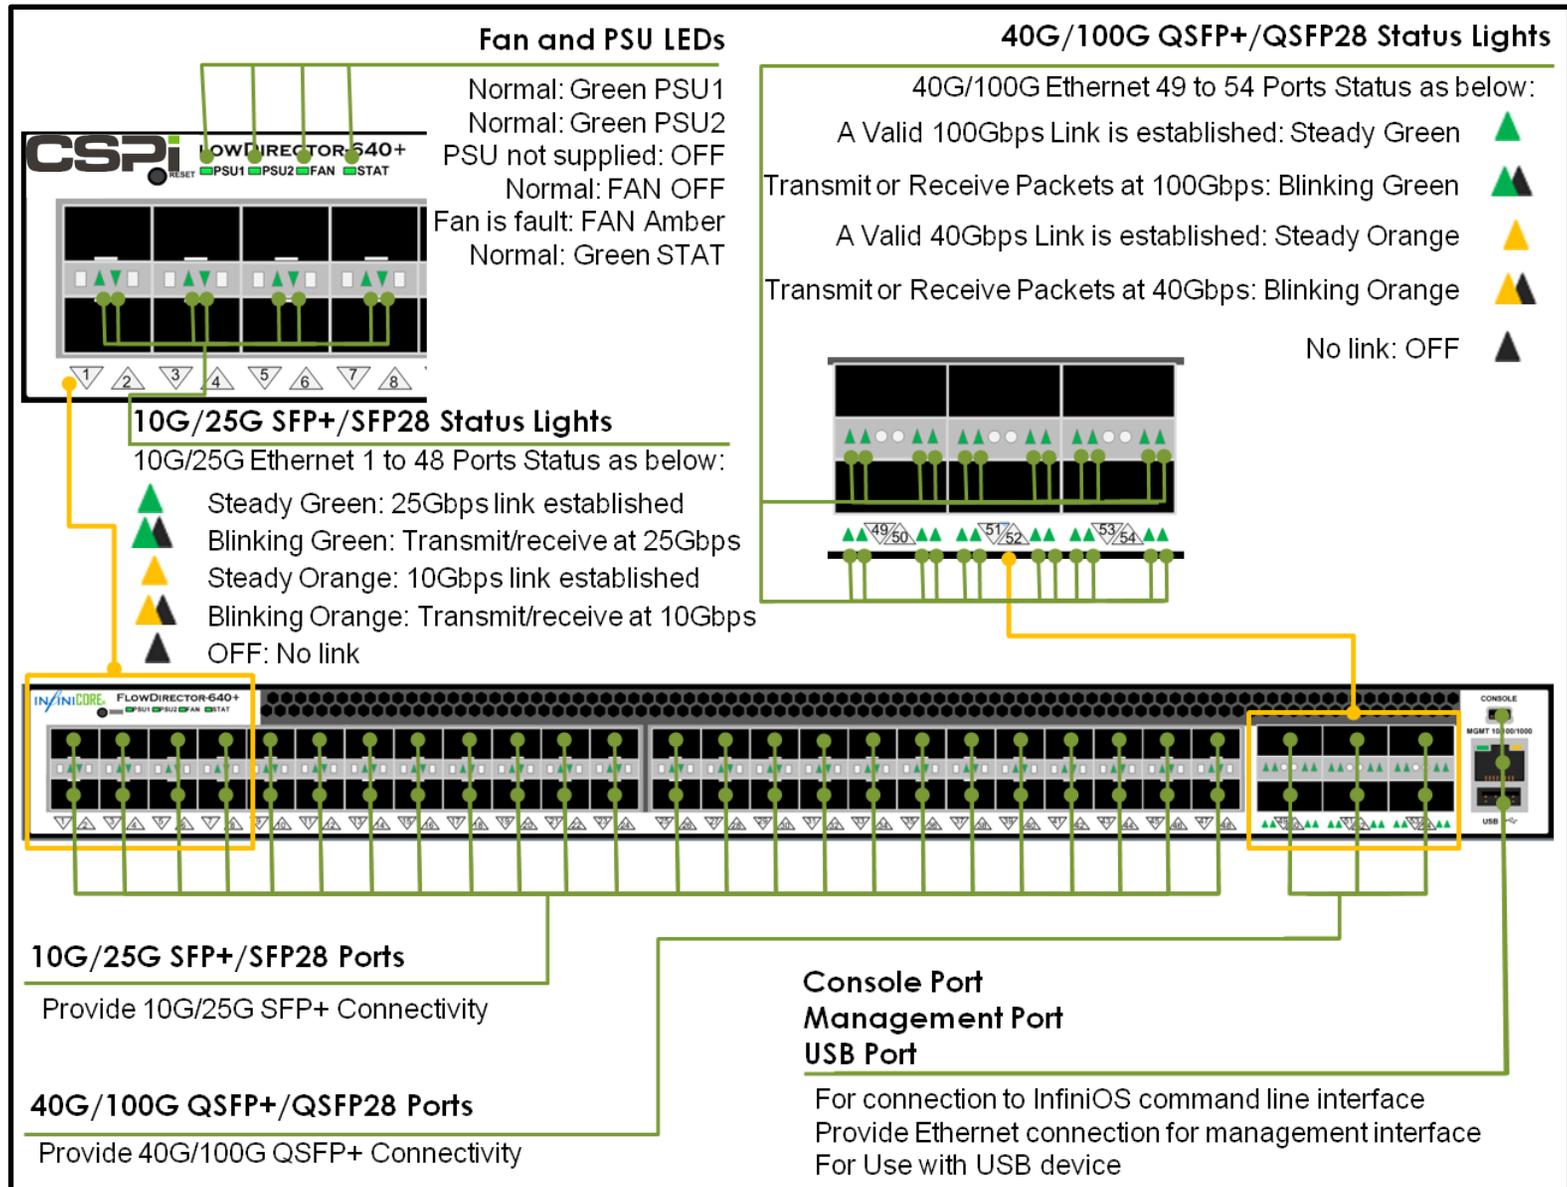# *Myricom nVoy Series* *Packet Broker* - Quick Reference Guide

Default WEB Management IP: 192.168.0.240

Serial Port Baud Rate: 115200, 8 Data Bits, No Parity, 1 Stop Bit
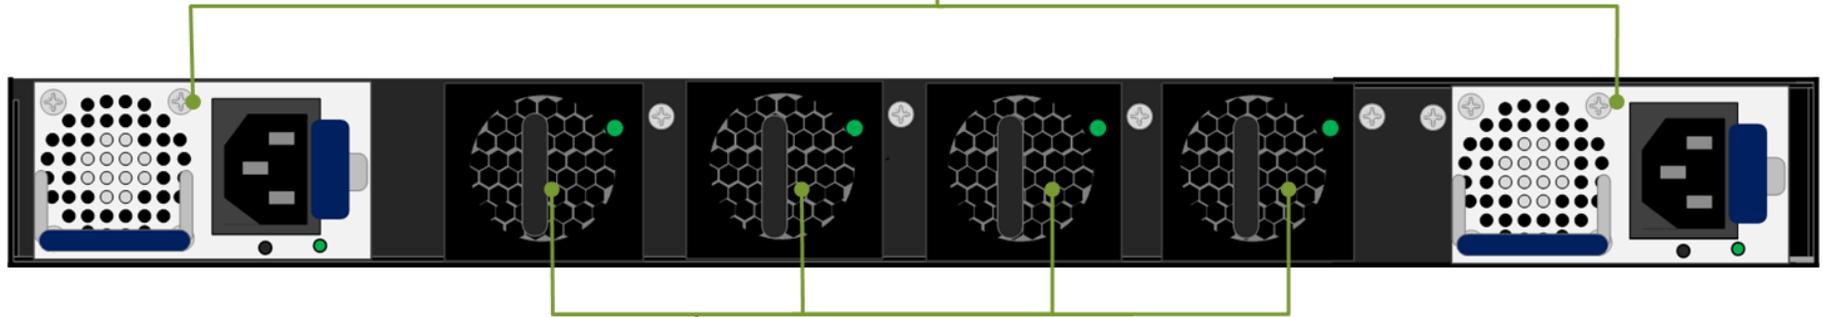
Default User Name: admin

Account 'admin' does not have password by default

Fan and PSU LEDs

Normal: Green PSU1
Normal: Green PSU2
PSU not supplied: OFF
Normal: FAN OFF
Fan is fault: FAN Amber
Normal: Green STAT

40G/100G QSFP+/QSFP28 Status Lights

40G/100G Ethernet 49 to 54 Ports Status as below:

A Valid 100Gbps Link is established: Steady Green

Transmit or Receive Packets at 100Gbps: Blinking Green

A Valid 40Gbps Link is established: Steady Orange

Transmit or Receive Packets at 40Gbps: Blinking Orange

No link: OFF

10G/25G SFP+/SFP28 Status Lights

10G/25G Ethernet 1 to 48 Ports Status as below:

Steady Green: 25Gbps link established
Blinking Green: Transmit/receive at 25Gbps
Steady Orange: 10Gbps link established
Blinking Orange: Transmit/receive at 10Gbps
OFF: No link

10G/25G SFP+/SFP28 Ports

Provide 10G/25G SFP+ Connectivity

40G/100G QSFP+/QSFP28 Ports

Provide 40G/100G QSFP+ Connectivity

Console Port
Management Port
USB Port

For connection to InfiniOS command line interface
Provide Ethernet connection for management interface
For Use with USB device

AC Power Supply

AC power connection for use with the supplied power cords

Hot Swappable Fans

WORK FLOW 1: Change Management IP Address
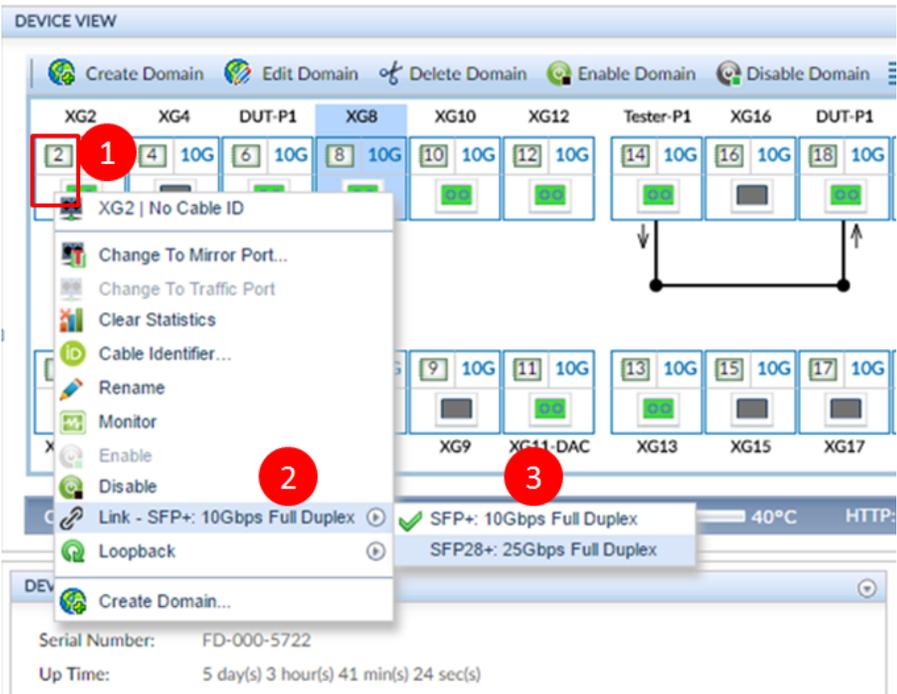
WORK FLOW 2: User Management and Firmware Update

DEVICE INFORMATION

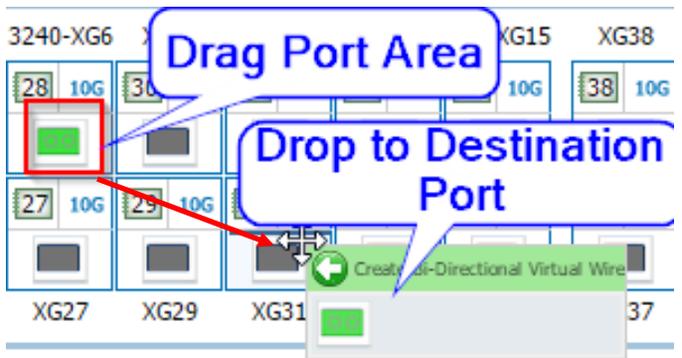|	
Serial Number:	FD-002-5738
Up Time:	1 day(s) 17 hour(s) 6 min(s) 8 sec(s)
System Time:	2015-07-30 09:14:59 -0700 [Change]
Host Name:	nVoy Packet Broker [Change]
Management IP:	192.168.0.240 ① [Change]
Firmware Version:	1.8.2.6 [Manage]
Location:	Please specify the location information [Change]
Contact:	Please specify the contact information [Change]

DEVICE OPERATIONS

User And Device ①   Services   Event Notifications   Update ②

Configuration:	[Save]	[Download]	[Upload]	[Reset]
Appliance:	[Reboot]	[Shutdown]		[Health Log]

CSPi

WORK FLOW 3: Change Port Speed

WORK FLOW 4: Change Port Name

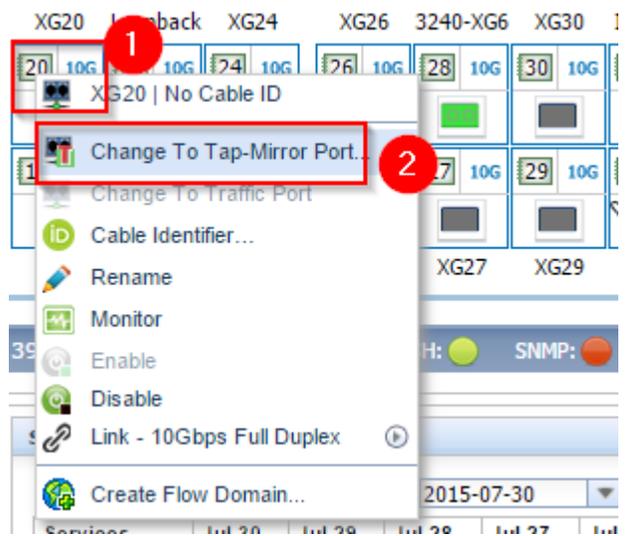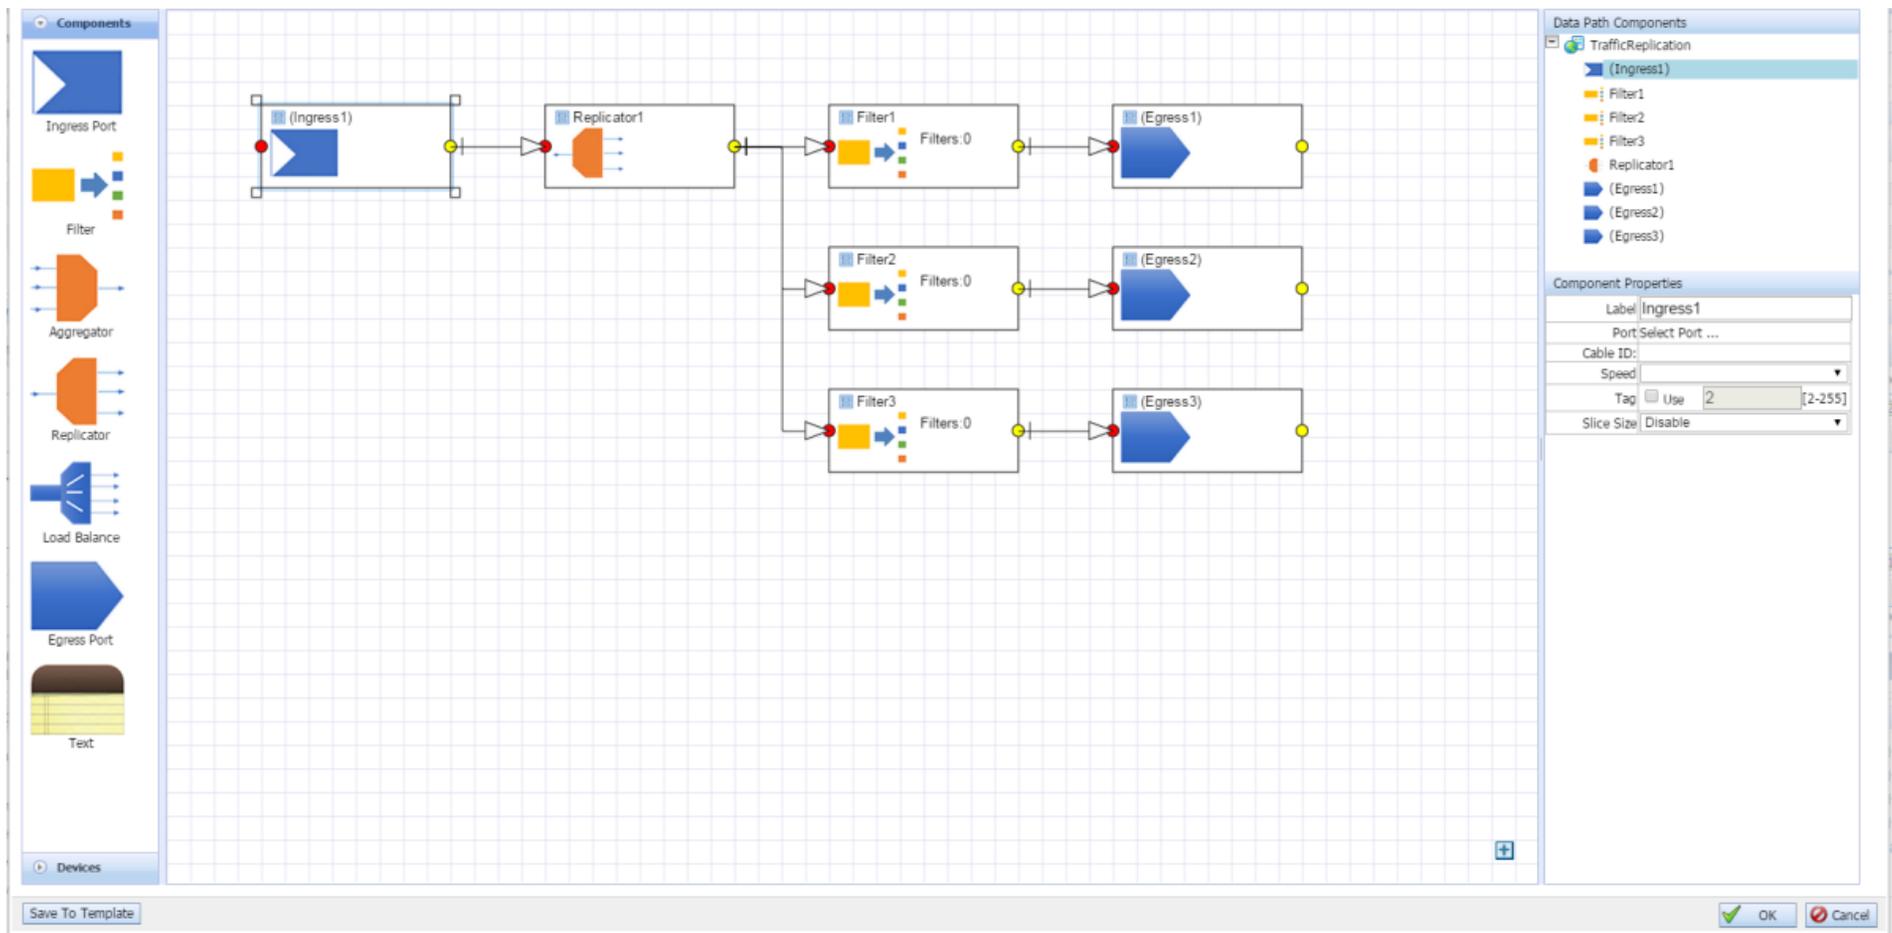## WORK FLOW 5: Create Virtual Wire
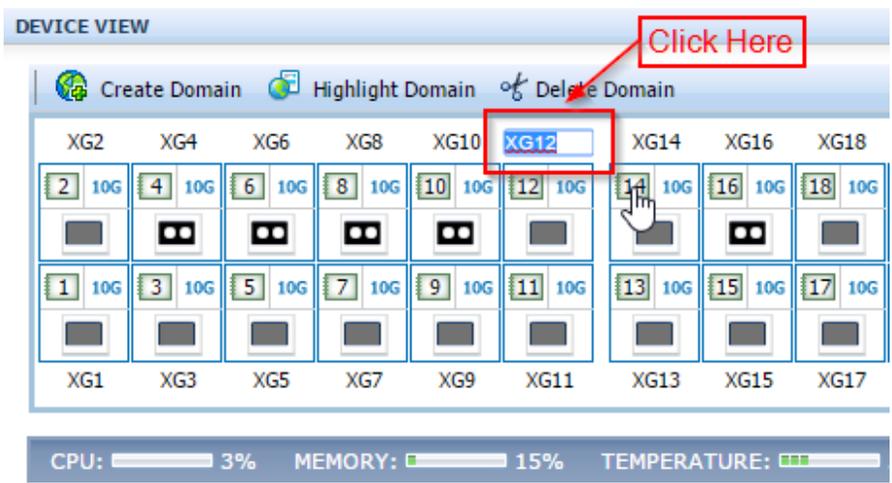
WORK FLOW 6: Create TAP Port

WORK FLOW 7: Traffic Replication using Data Path Designer

1: Click "Create Domain" and Select "Data Path Designer"

2. Drag and Drop Components to Workspace

3. Connect the Components By Drag and Drop the Magnet Dot

4. Define the Attributes of Selected Component